

FRONT WASHER JET

Fitting Instructions



1. Remove the appropriate parts of the dash board in accordance with the Manufacturers Workshop Manual to gain access.

2. Mount the Bracket with the Pump using the existing fasteners on the wing.


3. Route the OUT Pipe from the pump, through the bulkhead using the existing gromit, and feed it across the bulkhead to the washer jet.

4. Mount the Washer Jet with the supplied M10 Nut and Gasket

5. Put the Push Fitting onto the Pipe and connect the pipe to the back of the Washer Jet.

6. From the IN feed pump, take the old filter out and drop the supplied filter on the pick up pipe into the water reservoir.

7. Snap on the supplied Red Cap.

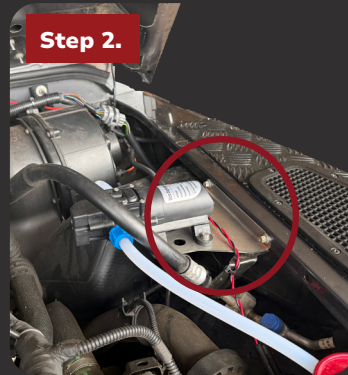

Step 2.



Step 3.

OUT



Step 3.1

Pipe going in



Step 3.2

Pipe coming out



Step 3.3

Where the pipe goes behind the Dash



Step 4.



Step 5.



Step 6&7.



FRONT WASHER JET

Wiring Instructions

